

Congratulations upon your selection of this CASIO watch.

## Applications

The built-in sensors of this watch measure direction, barometric pressure, temperature and altitude. Measured values are then shown on the display. Such features make this watch useful when hiking, mountain climbing, or when engaging in other such outdoor activities.

### Warning !

- The measurement functions built into this watch are not intended for taking measurements that require professional or industrial precision. Values produced by this watch should be considered as reasonable representations only.
- The Moon phase indicator and tide graph data that appear on the display of this watch are not intended for navigation purposes. Always use proper instruments and resources to obtain data for navigation purposes.
- This watch is not an instrument for calculating low tide and high tide times. The tide graph of this watch is intended to provide a reasonable approximation of tidal movements only.
- When engaging in mountain climbing or other activities in which losing your way can create a dangerous or life-threatening situation, always use a second compass to confirm direction readings.
- Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of this product or its malfunction.

E-1

## About This Manual



- Button operations are indicated using the letters shown in the illustration.
- Note that the product illustrations in this manual are intended for reference only, and so the actual product may appear somewhat different than depicted by an illustration.

E-2

## 2. Check the Home City and the daylight saving time (DST) setting.

Use the procedure under "To configure Home City settings" (page E-20) to configure your Home City and daylight saving time settings.

### Important!

Proper World Time Mode and Tide/Moon Data Mode data depend on correct Home City, time, and date settings in the Timekeeping Mode. Make sure you configure these settings correctly.

## 3. Set the current time.

See "Configuring Current Time and Date Settings" (page E-22).

The watch is now ready for use.

E-4

- E-34 To find the bearing to an objective
- E-35 To determine the direction angle to an objective on a map and head in that direction (Bearing Memory)

### E-38 Taking Barometric Pressure and Temperature Readings

- E-38 To enter and exit the Barometer/Thermometer Mode
- E-38 To take barometric pressure and temperature readings
- E-44 To calibrate the pressure sensor and the temperature sensor

### E-46 Taking Altitude Readings

- E-47 To take an altimeter reading
- E-49 To select the altitude auto measurement method
- E-50 To specify the altitude differential start point
- E-51 To use the altitude differential value
- E-52 To specify a reference altitude value
- E-53 To save a manual measurement

### E-61 Specifying Temperature, Barometric Pressure, and Altitude Units

- E-61 To specify temperature, barometric pressure, and altitude units

### E-63 Precautions Concerning Simultaneous Measurement of Altitude and Temperature


### E-64 Viewing Altitude Records

- E-64 To view altitude records
- E-67 To clear the contents of a specific memory area

E-6

## Things to check before using the watch

### 1. Check the battery power level.

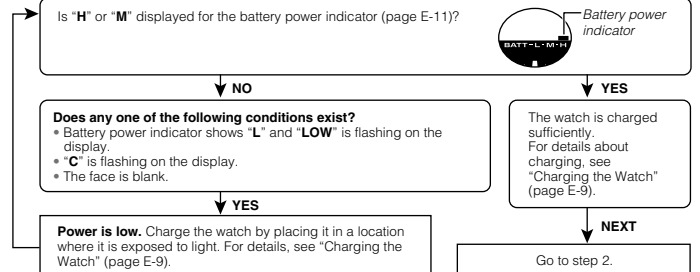

E-3

## Contents

- E-2 About This Manual
- E-3 Things to check before using the watch
- E-9 Charging the Watch
  - E-14 To recover from the sleep state
- E-15 Mode Reference Guide
- E-19 Timekeeping
- E-20 Configuring Home City Settings
  - E-20 To configure Home City settings
  - E-21 To change the Daylight Saving Time (summer time) setting
- E-22 Configuring Current Time and Date Settings
  - E-22 To change the current time and date settings
- E-25 Taking Direction Readings
  - E-25 To take a digital compass reading
  - E-28 To perform bidirectional calibration
  - E-29 To perform northerly calibration
  - E-30 To perform magnetic declination correction
  - E-31 To store a direction angle reading in Bearing Memory
  - E-33 To set a map and find your current location

E-5

### E-68 Viewing Tide and Moon Data

- E-69 To enter the Tide/Moon Data Mode
- E-70 To view Moon Data for a particular date, or Tide Data for a particular date and time
- E-71 To adjust the high tide time
- E-72 To reverse the displayed Moon phase

### E-77 Using the Alarm

- E-77 To enter the Alarm Mode
- E-78 To set an alarm time
- E-79 To turn an alarm and the Hourly Time Signal on and off
- E-79 To stop the alarm

### E-80 Using the Stopwatch

- E-80 To enter the Stopwatch Mode
- E-80 To perform an elapsed time operation
- E-80 To pause at a split time
- E-81 To measure two finishes

### E-82 Using the Countdown Timer

- E-82 To enter the Countdown Timer Mode
- E-84 To configure countdown timer settings
- E-85 To use the countdown timer
- E-85 To turn the progress beeper on and off

E-7

## E-86 Checking the Current Time in a Different Time Zone

- E-86 To enter the World Time Mode
- E-86 To view the time in another time zone
- E-87 To specify standard time or daylight saving time (DST) for a city

## E-88 Illumination

- E-88 To turn on illumination manually
- E-88 To change the illumination duration
- E-90 To turn the auto light switch on and off

## E-92 Other Settings

- E-92 To turn the button operation tone on and off
- E-93 To turn Power Saving on and off

## E-94 Troubleshooting

## E-98 Specifications

## Charging the Watch

The face of the watch is a solar cell that generates power from light. The generated power charges a built-in rechargeable battery, which powers watch operations. The watch charges whenever it is exposed to light.

### Charging Guide



Whenever you are not wearing the watch, leave it in a location where it is exposed to light.

- Best charging performance is achieved by exposing the watch to the strongest light available.



When wearing the watch, make sure that its face is not blocked from light by the sleeve of your clothing.

- The watch may enter a sleep state (page E-14) if its face is blocked by your sleeve even only partially.

### Warning!

Leaving the watch in bright light for charging can cause it to become quite hot. Take care when handling the watch to avoid burn injury. The watch can become particularly hot when exposed to the following conditions for long periods.

- On the dashboard of a car parked in direct sunlight
- Too close to an incandescent lamp
- Under direct sunlight

E-8


E-9

### Important!

- Allowing the watch to become very hot can cause its liquid crystal display to black out. The appearance of the LCD should become normal again when the watch returns to a lower temperature.
- Turn on the watch's Power Saving function (page E-14) and keep it in an area normally exposed to bright light when storing it for long periods. This helps to ensure that power does not run down.
- Storing the watch for long periods in an area where there is no light or wearing it in such a way that it is blocked from exposure to light can cause power to run down. Expose the watch to bright light whenever possible.

## Power Levels

You can get an idea of the watch's power level by observing the battery power indicator on the display.

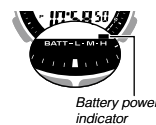

Battery power indicator

Level	Battery Power Indicator	Function Status
1 (H)	BATT-LEVEL-H	All functions enabled.
2 (M)	BATT-LEVEL-M	All functions enabled.
3 (L)	BATT-LEVEL-L	Illumination, beeper, and sensor operation disabled.
4 (C)	BATT-LEVEL-C	Except for timekeeping and the C (charge) indicator, all functions and display indicators disabled.
5	BATT-LEVEL-5	All functions disabled.

- The flashing **LOW** indicator at Level 3 (L) tells you that battery power is very low, and that exposure to bright light for charging is required as soon as possible.
- At Level 5, all functions are disabled and settings return to their initial factory defaults. Once the battery reaches Level 2 (M) after falling to Level 5, reconfigure the current time, date, and other settings.
- Display indicators reappear as soon as the battery is charged from Level 5 to Level 2 (M).
- Leaving the watch exposed to direct sunlight or some other very strong light source can cause the battery power indicator to show a reading temporarily that is higher than the actual battery level. The correct battery level should be indicated after a few minutes.

E-10

E-11

- All data stored in memory is deleted, and the current time and all other settings return to their initial factory defaults whenever battery power drops to Level 5 and when you have the battery replaced.

## Power Recovery Mode

- Performing multiple sensor, illumination, or beeper operations during a short period may cause all of the battery power indicators (H, M, and L) to start flashing on the display. This indicates that the watch is in the power recovery mode. Illumination, alarm, countdown timer alarm, hourly time signal, and sensor operations will be disabled until battery power recovers.
- Battery power will recover in about 15 minutes. At this time, the battery power indicators (H, M, L) will stop flashing. This indicates that the functions listed above are enabled again.
- If all of the battery power indicators (H, M, L) are flashing and the C (charge) indicator also is flashing, it means the battery level is very low. Expose the watch to bright light as soon as possible.
- Even if battery power is at Level 1 (H) or Level 2 (M), the Digital Compass Mode, Barometer/Thermometer Mode, or Altimeter Mode sensor may be disabled if there is not enough voltage available to power it sufficiently. This is indicated when all of the battery power indicators (H, M, L) are flashing.
- Frequent flashing of all of the battery power indicators (H, M, L) probably means that remaining battery power is low. Leave the watch in bright light to allow it to charge.

E-12

E-13

## Power Saving

When turned on, Power Saving enters a sleep state automatically whenever the watch is left for a certain period in an area where it is dark. The table below shows how watch functions are affected by Power Saving.

- For information about enabling and disabling power saving, see "To turn Power Saving on and off" (page E-93).
- There actually are two sleep state levels: "display sleep" and "function sleep".

Elapsed Time in Dark	Display	Operation
60 to 70 minutes (display sleep)	Blank, with <b>PS</b> flashing	Display is off, but all functions are enabled.
6 or 7 days (function sleep)	Blank, with <b>PS</b> not flashing	All functions are disabled, but timekeeping is maintained.

- The watch will not enter a sleep state between 6:00 AM and 9:59 PM. If the watch is already in a sleep state when 6:00 AM arrives, however, it will remain in the sleep state.
- The watch will not enter a sleep state while it is in the Stopwatch Mode or Countdown Timer Mode.

### To recover from the sleep state

Move the watch to a well-lit area, press any button, or angle the watch towards your face for reading (page E-89).

E-14

E-15

## Charging Times

Exposure Level (Brightness)	Daily Operation <sup>*1</sup>	Level Change <sup>*2</sup>				
		Level 5	Level 4	Level 3	Level 2	Level 1
Outdoor sunlight (50,000 lux)	5 min.	2 hours		13 hours	4 hours	
Sunlight through a window (10,000 lux)	24 min.	5 hours		62 hours	17 hours	
Daylight through a window on a cloudy day (5,000 lux)	48 min.	10 hours		125 hours	34 hours	
Indoor fluorescent lighting (500 lux)	8 hours	100 hours		---	---	

<sup>\*1</sup> Approximate amount of exposure time required each day to generate enough power for normal daily operation.

<sup>\*2</sup> Approximate amount of exposure time (in hours) required to take power from one level to the next.

- The above exposure times all are for reference only. Actual exposure times depend on lighting conditions.

• For details about the operating time and daily operating conditions, see the "Power Supply" section of the Specifications (page E-101).


## Mode Reference Guide

Your watch has 10 "modes". The mode you should select depends on what you want to do.

To do this:	Enter this mode:	See:
• View the current date in the Home City • Configure Home City and daylight saving time (DST) settings • Configure time and date settings	Timekeeping Mode	E-19
• Determine your current bearing or the direction from your current location to a destination as a direction indicator and angle value • Determine your current location using the watch and a map	Digital Compass Mode	E-25
• View the barometric pressure and temperature at your current location • View a graph of barometric pressure readings	Barometer/Thermometer Mode	E-38
• View the altitude at your current location • Determine the altitude differential between two locations (reference point and current location) • Record an altitude reading with the measurement time and date	Altimeter Mode	E-46
View information about tide conditions and the Moon phase	Tide/Moon Data Mode	E-68
Recall records created in the Altimeter Mode	Data Recall Mode	E-64
Set an alarm time	Alarm Mode	E-77
Use the stopwatch to measure elapsed time	Stopwatch Mode	E-80
Use the countdown timer	Countdown Timer Mode	E-82
View the current time in one of 48 cities (31 time zones) around the globe	World Time Mode	E-86


## Selecting a Mode

- The illustration below shows which buttons you need to press to navigate between modes.
- To return to the Timekeeping Mode from any other mode, hold down (D) for about two seconds.

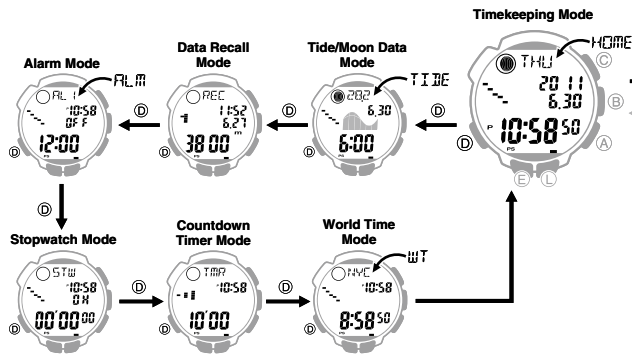

E-16

- You can use buttons (A), (B), and (C) to enter a sensor mode directly from the Timekeeping Mode or from another sensor mode. To enter a sensor mode from the Tide/Moon Data, Data Recall, Alarm, Stopwatch, Countdown Timer, or World Time Mode, first enter the Timekeeping Mode and then press the applicable button.

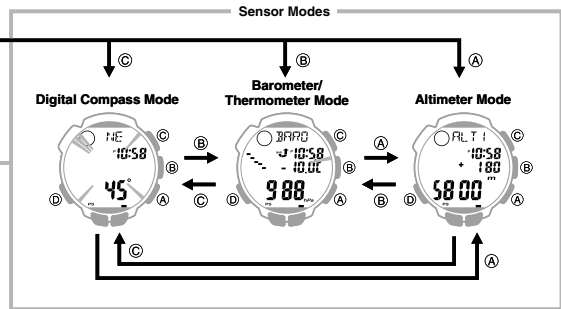

E-17

## General Functions (All Modes)

The functions and operations described in this section can be used in all of the modes.

### Direct Timekeeping Mode Access

- To enter the Timekeeping Mode from any other mode, hold down (D) for about two seconds.

### Auto Return Features

- The watch will automatically return to the Timekeeping Mode if you do not perform any button operation for a particular amount of time in each mode.

Mode Name	Approximate Elapsed Time
Tide/Moon Data, Data Recall, Alarm, Digital Compass	3 minutes
Altimeter	1 hour minimum 24 hours maximum
Barometer/Thermometer	24 hours
Setting screen (digital setting flashing)	3 minutes

- If you leave a screen with flashing digits on the display for two or three minutes without performing any operation, the watch exits the setting screen automatically.

### Initial Screens

When you enter the Data Recall, Alarm, World Time, or Digital Compass Mode, the data you were viewing when you last exited the mode appears first.

### Scrolling


The (A) and (C) buttons are used on the setting screen to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

E-18

## Timekeeping

Use the Timekeeping Mode (HOME) to set and view the current time and date.


- Each press of (E) in the Timekeeping Mode will change screen contents as shown below.
- If you leave the Tide Graph on the display, it will automatically return to the year screen after about 24 hours.

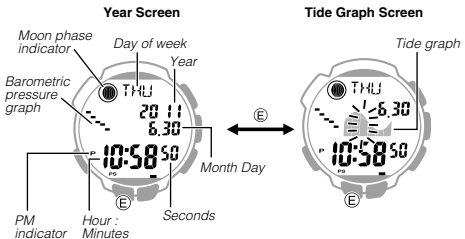

E-19

## Configuring Home City Settings

There are two Home City settings: actually selecting the Home City and selecting either standard time or daylight saving time (DST).

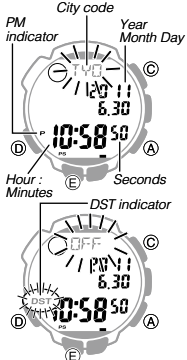

### To configure Home City settings

- In the Timekeeping Mode, hold down (E) until SET Hold appears on the display and then the city code starts to flash.
  - The watch will exit the setting mode automatically if you do not perform any operation for about two or three minutes.
  - For details about city codes, see the "City Code Table" at the back of this manual.
- Use (A) (East) and (C) (West) to scroll through the available city codes.
  - Keep scrolling until the city code you want to select as your Home City is displayed.
- Press (D) to display the DST setting screen.
- Press (A) to toggle the DST setting between Daylight Saving Time (ON) and standard time (OFF).
  - Note that you cannot switch between standard time and daylight saving time (DST) while UTC is selected as your Home City.

E-20

- After all of the settings are the way you want, press (E) to exit the setting screen.
  - To return to the screen in step 1, press (E) again.
  - The DST indicator appears to indicate that Daylight Saving Time is turned on.

### Note

- After you specify a city code, the watch will use UTC\* offsets in the World Time Mode to calculate the current time for other time zones based on the current time in your Home City.
  - \* Coordinated Universal Time, the world-wide scientific standard of timekeeping. The reference point for UTC is Greenwich, England.

### To change the Daylight Saving Time (summer time) setting

- In the Timekeeping Mode, hold down (E) until SET Hold appears on the display and then the city code starts to flash.
- Press (D) to display the DST setting screen.
- Press (A) to toggle the DST setting between Daylight Saving Time (ON) and standard time (OFF).
- After all of the settings are the way you want, press (E) to exit the setting screen.
  - To return to the screen in step 1, press (E) again.
  - The DST indicator appears to indicate that Daylight Saving Time is turned on.




E-21

## Configuring Current Time and Date Settings


You can use the procedure below to adjust the Timekeeping Mode time and date settings if they are off.

### To change the current time and date settings

- In the Timekeeping Mode, hold down (E) until SET Hold appears on the display and then the city code starts to flash.

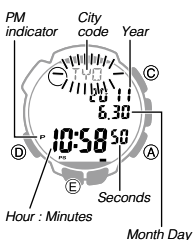

- Press (D) to move the flashing in the sequence shown below to select the other settings.



- The following steps explain how to configure timekeeping settings only.

- When the timekeeping setting you want to change is flashing, use (A) and/or (C) to change it as described below.

Screen	To do this:	Do this:
TYO	Change the city code	Use (A) (East) and (C) (West).
OFF DST	Toggle between Daylight Saving Time (ON) and Standard Time (OFF).	Press (A).
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping.	Press (A).
50	Reset the seconds to 00 (If the current seconds count is between 30 and 59, one is added to the minute count).	Press (A).
" 10:58	Change the hour or minutes	
20 11 6.30	Change the year, month, or day	Use (A) (+) and (C) (-).

E-22

E-23


4. After all of the settings are the way you want, press **(E)** to exit the setting screen.  
 \* To return to the screen in step 1, press **(E)** again.

**Note**

- For information about selecting a Home City and configuring the DST setting, see "Configuring Home City Settings" (page E-20).
- While the 12-hour format is selected for timekeeping, a **P (PM)** indicator will appear for times from noon to 11:59 p.m. No indicator appears for times from midnight to 11:59 a.m. With 24-hour format, time is displayed from 0:00 to 23:59, without any **P (PM)** indicator.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's rechargeable battery replaced or after power drops to Level 5 (page E-11).
- The day of the week changes automatically when the date changes.
- Refer to the pages shown below for more information on Timekeeping Mode settings.
  - Button operation tone on/off: "To turn the button operation tone on and off" (page E-92)
  - Illumination duration setting: "To change the illumination duration" (page E-88)
  - Enabling and disabling power saving: "To turn Power Saving on and off" (page E-93).
  - Changing the temperature, barometric pressure, and altitude units (for a city code other than **TYO**): "To specify temperature, barometric pressure, and altitude units" (page E-61)

**Taking Direction Readings**

In the Digital Compass Mode, a built-in bearing sensor detects magnetic north at regular intervals and indicates one of 16 directions on the display.

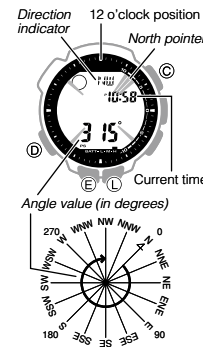

**To take a digital compass reading**

- Make sure the watch is in the Timekeeping Mode or any one of the sensor modes.
  - The sensor modes are: Digital Compass Mode, Barometer/Thermometer Mode, and Altimeter Mode.
- Place the watch on a flat surface. If you are wearing the watch, make sure that your wrist is horizontal (in relation to the horizon).
- Point the 12 o'clock position of the watch in the direction you want to measure.
- Press **(C)** to start digital compass measurement.
  - COMP** will appear on the display to indicate that a digital compass operation is in progress.
  - See "Digital Compass Readings" on page E-26 for information about what appears on the display.

**Note**

- If there is a value directly below the current time (center right of the display), it means that the bearing memory screen (page E-31) is displayed. If this happens, press **(E)** to exit the bearing memory screen.

5. After you are finished using the digital compass, press **(D)** to return to the Timekeeping Mode.

E-24

E-25

**Digital Compass Readings**

- When you press **(C)** to start digital compass measurement, **COMP** will initially appear on the display to indicate that a digital compass operation is in progress.
- About two seconds after you start a digital compass measurement operation, letters on the display will indicate the direction that the 12 o'clock position of the watch is pointing. Four pointers that indicate magnetic north, south, east, and west will also appear.
- After the first reading is obtained, the watch will continue to take digital compass readings automatically each second for up to 20 seconds. After that, measurement will stop automatically.
- The direction indicator and angle value will show **---** to indicate that digital compass readings are complete.
- The auto light switch is disabled during the 20 seconds that digital compass readings are being taken.
- The following table shows the meanings of each of the direction abbreviations that appear on the display.

Direction	Meaning	Direction	Meaning	Direction	Meaning	Direction	Meaning
<b>N</b>	North	<b>NNE</b>	North-northeast	<b>NE</b>	Northeast	<b>ENE</b>	East-northeast
<b>E</b>	East	<b>ESE</b>	East-southeast	<b>SE</b>	Southeast	<b>SSE</b>	South-southeast
<b>S</b>	South	<b>SSW</b>	South-southwest	<b>SW</b>	Southwest	<b>WSW</b>	West-southwest
<b>W</b>	West	<b>WNW</b>	West-northwest	<b>NW</b>	Northwest	<b>NNW</b>	North-northwest

- The margin of error for the angle value and the direction indicator is  $\pm 11$  degrees while the watch is horizontal (in relation to the horizon). If the indicated direction is northwest (**NW**) and 315 degrees, for example, the actual direction can be anywhere from 304 to 326 degrees.

E-26

- Note that taking a measurement while the watch is not horizontal (in relation to the horizon) can result in large measurement error.
- You can calibrate the bearing sensor if you suspect the direction reading is incorrect.
- Any ongoing direction measurement operation is paused temporarily while the watch is performing an alert operation (daily alarm, Hourly Time Signal, countdown timer alarm) or while illumination is turned on (by pressing **(D)**). The measurement operation resumes for its remaining duration after the operation that caused it to pause is finished.
- See "Digital Compass Precautions" (page E-37) for important information about taking direction readings.

**Calibrating the Bearing Sensor**

You should calibrate the bearing sensor whenever you feel that the direction readings being produced by the watch are off. You can use any one of three different bearing sensor calibration methods: bidirectional calibration, northerly calibration, or magnetic declination correction.

**Bidirectional Calibration and Northerly Calibration**

Bidirectional calibration and northerly calibration calibrate the accuracy of the bearing sensor in relation to magnetic north. Use bidirectional calibration when you want to take readings within an area exposed to magnetic force. This type of calibration should be used if the watch becomes magnetized for any reason. With northerly calibration, you "teach" the watch which way is north (which you have to determine with another compass or some other means).

**Important!**

The more correctly you perform bidirectional calibration, the better the accuracy of the bearing sensor readings. You should perform bidirectional calibration whenever you change environments where you use the bearing sensor, and whenever you feel that the bearing sensor is producing incorrect readings.

E-27

**Magnetic Declination Correction**


With magnetic declination correction, you input a magnetic declination angle (difference between magnetic north and true north), which allows the watch to indicate true north. You can perform this procedure when the magnetic declination angle is indicated on the map you are using. Note that you can input the declination angle in whole degree units only, so you may need to round off the value specified on the map. If your map indicates the declination angle as 7.4°, you should input 7°. In the case of 7.6° input 8°, for 7.5° you can input 7° or 8°.

**Precautions about bidirectional calibration**

- You can use any two opposing directions for bidirectional calibration. You must, however, make sure that they are 180 degrees opposite each other. Remember that if you perform the procedure incorrectly, you will get wrong bearing sensor readings.
- Do not move the watch while calibration of either direction is in progress.
- You should perform bidirectional calibration in an environment that is the same as that where you plan to be taking direction readings. If you plan to take direction readings in an open field, for example, calibrate in an open field.

**To perform bidirectional calibration**

- In the Digital Compass Mode, hold down **(E)** until **SET Hold** appears on the display and then the magnetic declination settings start to flash.
- Press **(D)** to display the bidirectional calibration screen.
  - At this time, the north pointer flashes at the 12 o'clock position and the display will show **-1-** to indicate that the watch is ready to calibrate the first direction.

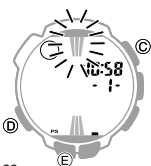


E-28

- Place the watch on a level surface facing any direction you want, and press **(C)** to calibrate the first direction.
  - is shown on the display while calibration is being performed. When calibration is successful, the display will show **OK** and **-2-**, and the north pointer flashing at the 6 o'clock position. This means that the watch is ready for calibration of the second direction.
- Rotate the watch 180 degrees.
- Press **(C)** again to calibrate the second direction.
  - is shown on the display while calibration is being performed. When calibration is successful, the display will show **OK** and then change to the Digital Compass Mode screen.

**To perform northerly calibration**

**Important!**


If you want to perform both northerly and bidirectional calibration, perform bidirectional calibration first, and then perform northerly calibration. This is necessary because bidirectional calibration cancels any existing northerly calibration setting.

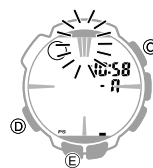

- In the Digital Compass Mode, hold down **(E)** until **SET Hold** appears on the display and then the magnetic declination settings start to flash.
- Press **(D)** twice to display the northerly calibration screen.
  - At this time, **-N-** (north) appears on the display.
- Place the watch on a level surface, and position it so that its 12 o'clock position points north (as measured with another compass).
- Press **(C)** to start the calibration operation.
  - is shown on the display while calibration is being performed. When calibration is successful, the display will show **OK** and then change to the Digital Compass Mode screen.

E-29


**To perform magnetic declination correction**

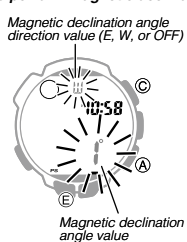

E-30

- In the Digital Compass Mode, hold down **(E)** until **SET Hold** appears on the display and then the magnetic declination settings start to flash.
- Use **(A)** (East) and **(C)** (West) to change the settings.
  - The following explains magnetic declination angle direction settings.
    - OFF:** No magnetic declination correction performed. The magnetic declination angle with this setting is 0°.
    - E:** When magnetic north is to the east (east declination)
    - W:** When magnetic north is to the west (west declination)
  - You can select a value within the range of W 90° to E 90° with these settings.
  - You can turn off **(OFF)** magnetic declination correction by pressing **(A)** and **(C)** at the same time.
  - The illustration, for example, shows the value you should input and the direction setting you should select when the map shows a magnetic declination of 1° West.
- When the setting is the way you want, press **(E)** to exit the setting screen.

**Using Bearing Memory**

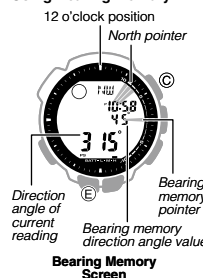

**Bearing Memory Screen**

Bearing Memory lets you temporarily store and display a direction reading so you can use it as a reference as you take subsequent digital compass readings. The Bearing Memory screen displays the direction angle for the stored reading, along with an indicator that indicates the stored reading. When you take digital compass readings while the Bearing Memory screen is displayed, the direction angle of the current digital compass reading (as read from the 12 o'clock position of the watch) and the stored Bearing Memory direction reading will both be shown.

**To store a direction angle reading in Bearing Memory**

- Press **(C)** to start a digital compass measurement operation (page E-25).
  - This will take an initial reading and then take readings every second for 20 seconds.
  - If a bearing memory direction angle value is already displayed, it means that there is a reading already stored in Bearing Memory. If this happens, press **(E)** to clear the Bearing Memory reading and exit the bearing memory screen before performing the above step.
- During the 20 seconds that digital compass readings are being taken, press **(E)** to store the current reading in Bearing Memory.
  - The Bearing Memory direction angle flashes for about one second as it is stored in Bearing Memory. After that, the Bearing Memory screen (which shows the bearing memory direction angle) will appear, and a new 20-second direction reading operation will start.
  - You can press **(C)** at any time while the Bearing Memory screen is displayed, to start a new 20-second direction reading operation. Doing so will display the direction angle for the direction that the 12 o'clock position of the watch is pointed. The direction angle of the current reading will disappear from the display after the 20-second direction reading operation is complete.

E-31

- During the first 20 seconds after you display the Bearing Memory screen or during a 20-second direction reading operation you triggered by pressing **(C)** while the Bearing Memory screen is on the display, the direction stored in memory is indicated by a Bearing Memory pointer.
- Pressing **(E)** while the Bearing Memory screen is displayed will clear the reading currently in Bearing Memory and start a new 20-second direction reading operation.


### Using the Digital Compass While Mountain Climbing or Hiking

This section provides three practical applications for using the watch's built-in digital compass.

- Setting a map and finding your current location
- Having an idea of your current location is important when mountain climbing or hiking. To do this, you need to "set the map", which means to align the map so the directions indicated on it are aligned with the actual directions of your location. Basically what you are doing is aligning north on the map with north as indicated by the watch.
- Finding the bearing to an objective
- Determining the direction angle to an objective on a map and heading in that direction

### To set a map and find your current location

1. With the watch on your wrist, position it so the face is horizontal.
2. While in the Timekeeping Mode or in any of the sensor modes, press **(C)** to take a compass reading.
  - The reading will appear on the display after about two seconds.
3. Rotate the map without moving the watch so the northerly direction indicated on the map matches north as indicated by the watch.
  - If the watch is configured to indicate magnetic north, align the map's magnetic north with the watch indication. If the watch has been configured with a declination to correct to true north, align the map's true north with the watch indication. For details, see "Calibrating the Bearing Sensor" (page E-27).
  - This will position the map in accordance with your current location.
4. Determine your location as you check the geographic contours around you.

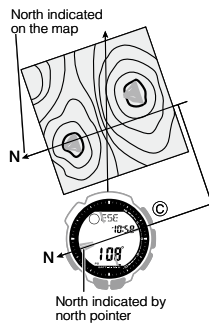


E-32

E-33


### To find the bearing to an objective

1. Set the map so its northerly indication is aligned with north as indicated by the watch, and determine your current location.
  - See "To set a map and find your current location" on page E-33 for information about how to perform the above step.
2. Set the map so the direction you want to travel on the map is pointed straight in front of you.
3. With the watch on your wrist, position it so the face is horizontal.
4. While in the Timekeeping Mode or in any of the sensor modes, press **(C)** to take a compass reading.
  - The reading will appear on the display after about two seconds.
5. Still holding the map in front of you, turn your body until north as indicated by the watch and the northerly direction on the map are aligned.
  - This will position the map in accordance with your current location, so the bearing to your objective is straight ahead of you.

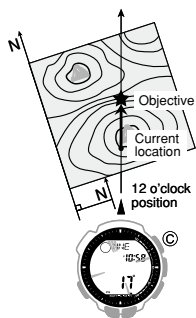

### To determine the direction angle to an objective on a map and head in that direction (Bearing Memory)


1. Set the map so its northerly indication is aligned with north as indicated by the watch, and determine your current location.
  - See "To set a map and find your current location" on page E-33 for information about how to perform the above step.
2. As shown in the illustration to the left, change your position so you (and the 12 o'clock position of the watch) are pointed in the direction of objective, while keeping the northerly direction indicated on the map aligned with north as indicated by the watch.
  - If you find it difficult to perform the above step while keeping everything aligned, first move into the correct position (12 o'clock position of the watch pointed at the objective) without worrying about the orientation of the map. Next, perform step 1 again to set the map.

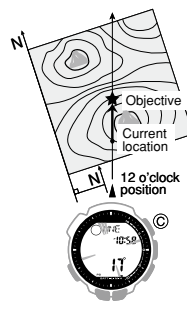

E-34

E-35

3. While in the Timekeeping Mode or in any of the sensor modes, press **(C)** to take a compass reading.
4. While direction angle readings are in progress, press **(E)** to record the currently displayed direction in Bearing Memory.
  - The direction angle value and pointer stored in Bearing Memory will remain on the display for about 20 seconds.
  - To re-display the Bearing Memory direction angle value and Bearing Memory pointer, press **(C)**.
  - See "Using Bearing Memory" (page E-31) for more information.
5. Now you can advance while monitoring the Bearing Memory pointer to ensure that it remains in the 12 o'clock position.
  - Pressing **(E)** while the Bearing Memory direction angle value and Bearing Memory pointer are on the display will clear the Bearing Memory data you saved in step 3 and save the current direction reading in Bearing Memory.

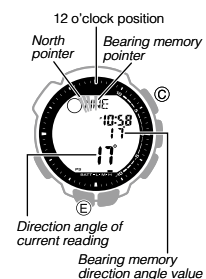

- Note**
- When mountain climbing or hiking, conditions or geographic contours may make it impossible for you to advance in a straight line. If this happens, return to step 1 and save a new direction to the objective.

### Digital Compass Precautions

This watch features a built-in magnetic bearing sensor that detects terrestrial magnetism. This means that north indicated by this watch is magnetic north, which is somewhat different from true polar north. The magnetic north pole is located in northern Canada, while the magnetic south pole is in southern Australia. Note that the difference between magnetic north and true north as measured with all magnetic compasses tends to be greater as one gets closer to either of the magnetic poles. You should also remember that some maps indicate true north (instead of magnetic north), and so you should make allowances when using such maps with this watch.

### Location

- Taking a direction reading when you are near a source of strong magnetism can cause large errors in readings. Because of this, you should avoid taking direction readings while in the vicinity of the following types of objects: permanent magnets (magnetic necklaces, etc.), concentrations of metal (metal doors, lockers, etc.), high tension wires, aerial wires, household appliances (TVs, personal computers, washing machines, freezers, etc.).
- Accurate direction readings are impossible while in a train, boat, air plane, etc.
- Accurate readings are also impossible indoors, especially inside ferroconcrete structures. This is because the metal framework of such structures picks up magnetism from appliances, etc.

### Storage


- The precision of the bearing sensor may deteriorate if the watch becomes magnetized. Because of this, you should store the watch away from magnets or any other sources of strong magnetism, including: permanent magnets (magnetic necklaces, etc.) and household appliances (TVs, personal computers, washing machines, freezers, etc.).
- Whenever you suspect that the watch may have become magnetized, perform the procedure under "To perform bidirectional calibration" (page E-28).

E-36

E-37

## Taking Barometric Pressure and Temperature Readings

This watch uses a pressure sensor to measure air pressure (barometric pressure) and a temperature sensor to measure temperature.

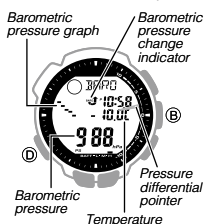


### To enter and exit the Barometer/Thermometer Mode

1. While in the Timekeeping Mode or in any of the sensor modes, press **(B)** to enter the Barometer/Thermometer Mode.
  - **BARO** will appear on the display, indicating that barometric pressure and temperature measurements are in progress. The measurement results will appear on the display after about five seconds.
  - After you press **(B)**, the watch will take readings every five seconds for the first three minutes, and then every two minutes after that.
2. Press **(D)** to return to the Timekeeping Mode.
  - The watch will return to the Timekeeping Mode automatically if you do not perform any operation for about 24 hours after entering the Barometer/Thermometer Mode.

### To take barometric pressure and temperature readings

- While in the Timekeeping Mode or in any of the sensor modes, press **(B)**.
- This starts barometric pressure and temperature measurements automatically.
- You also can perform a barometric pressure and temperature measurement at any time by pressing **(B)** in the Barometer/Thermometer Mode.
- The barometric pressure change indicator is displayed if there has been significant change in barometric pressure. For more information, see "Barometric Pressure Change Indicator" (page E-42).
- It can take up to four or five seconds for the barometric pressure reading to appear after you enter the Barometer/Thermometer Mode.

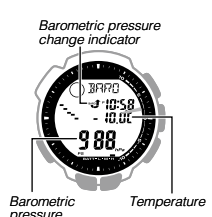

### Barometric Pressure

- Barometric pressure is displayed in units of 1 hPa (or 0.05 inHg).
- The displayed barometric pressure value changes to --- if a measured barometric pressure falls outside the range of 260 hPa to 1,100 hPa (7.65 inHg to 32.45 inHg). The barometric pressure value will reappear as soon as the measured barometric pressure is within the allowable range.

### Temperature


- Temperature is displayed in units of 0.1°C (or 0.2°F).
- The displayed temperature value changes to --- °C (or °F) if a measured temperature falls outside the range of -10.0°C to 60.0°C (14.0°F to 140.0°F). The temperature value will reappear as soon as the measured temperature is within the allowable range.

### Display Units

You can select either hectopascals (hPa) or inchesHg (inHg) as the display unit for the measured barometric pressure, and Celsius (°C) or Fahrenheit (°F) as the display unit for the measured temperature value. See "To specify temperature, barometric pressure, and altitude units" (page E-61).

### Barometric Pressure Graph

Barometric pressure graph




Barometric pressure indicates changes in the atmosphere. By monitoring these changes you can predict the weather with reasonable accuracy. This watch takes barometric pressure measurements automatically every two hours (at the 30th minute of every even numbered hour). Measurement results are used to produce barometric pressure graph and barometric pressure differential pointer readings.

E-38

E-39

## Reading the Barometric Pressure Graph

The barometric pressure graph shows readings of previous measurements for up to 10 hours.



- The horizontal axis of the graph represents time, with each dot standing for two hours. The rightmost dot represents the most recent reading.
- The vertical axis of the graph represents barometric pressure, with each dot standing for the relative difference between its reading and that of the dots next to it. Each dot represents 1 hPa.

The following shows how to interpret the data that appears on the barometric pressure graph.



- Rising barometric pressure indicates that upcoming weather will improve.
- Falling barometric pressure indicates that upcoming weather will deteriorate.

### Note


- If there are sudden changes in weather or temperature, the graph line of past measurements may run off the top or bottom of the display. The entire graph will become visible once barometric conditions stabilize.
- The following conditions cause the barometric pressure measurement to be skipped, with the corresponding point on the barometric pressure graph being left blank.
  - Barometric reading that is out of range (260 hPa to 1,100 hPa or 7.65 inHg to 32.45 inHg)
  - Sensor malfunction



Not visible on the display.

E-40


## Barometric Pressure Differential Pointer



This pointer indicates the relative difference between the most recent barometric pressure reading indicated on the barometric pressure graph (page E-39), and the current barometric pressure value displayed in the Barometer/Thermometer Mode (page E-38).

## Reading Barometric Pressure Differential Pointer

- Pressure differential is indicated in the range of  $\pm 10$  hPa, in 1-hPa units.
- The nearby screen shot, for example, shows what the pointer would indicate when the calculated pressure differential is approximately  $-5$  hPa (approximately  $-0.15$  inHg).
- Barometric pressure is calculated and displayed using hPa as the standard. The barometric pressure differential also can be read in inHg units as shown in the illustration ( $1 \text{ hPa} \approx 0.03 \text{ inHg}$ ).

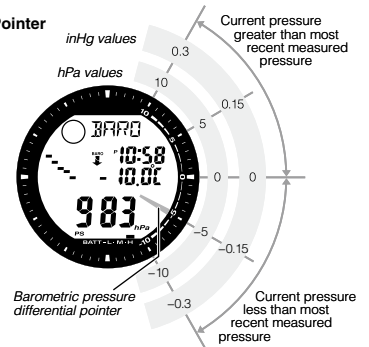

E-41

## Barometric Pressure Change Indicator

The watch analyzes the last 10 hours of barometric pressure. If it determines that there has been a significant change in pressure, it displays a barometric pressure change indicator. For example, you can start barometric pressure measurement when you arrive at a mountain lodge or campground for the night. The following morning you can check for changes and plan your day accordingly.

### Reading the Barometric Pressure Change Indicator

Indicator	Meaning
	Sudden rise in pressure.
	Sudden fall in pressure.
	Sustained fall in pressure, changing to a rise.
	Sustained rise in pressure, changing to a fall.

- The barometric pressure change indicator is not displayed if there has been no noteworthy change in barometric pressure.

E-42

### Important!

- To ensure proper results, take barometric readings under conditions where the altitude remains constant.

### Example

- In a lodge or campground
- On the ocean

- A change in altitude causes a change in barometric pressure. Because of this, correct readings are impossible. Do not take readings while ascending or descending a mountain, etc.
- The barometric pressure change indicator may appear at any time while the watch is in the Barometer/Thermometer Mode. Keep in mind, however, that its indication will not be correct unless the watch has been in an location where there was no change in altitude over the past several hours.

### Pressure Sensor and Temperature Sensor Calibration


The pressure sensor and temperature sensor built into the watch are calibrated at the factory and normally require no further adjustment. If you notice serious errors in the pressure readings and temperature readings produced by the watch, you can calibrate the sensor to correct the errors.

### Important!

- Incorrectly calibrating the barometric pressure sensor can result in incorrect readings. Before performing the calibration procedure, compare the readings produced by the watch with those of another reliable and accurate barometer.
- Incorrectly calibrating the temperature sensor can result in incorrect readings. Carefully read the following before doing anything.
  - Compare the readings produced by the watch with those of another reliable and accurate thermometer.
  - If adjustment is required, remove the watch from your wrist and wait for 20 or 30 minutes to give the temperature of the watch time to stabilize.

E-43

### To calibrate the pressure sensor and the temperature sensor

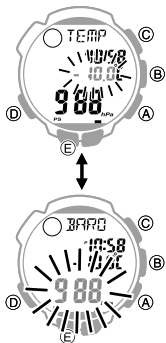

1. Take a reading with another measurement device to determine the exact current barometric pressure or temperature.
2. With the watch in the Timekeeping Mode or in any of the sensor modes, press (B) to enter the Barometer/Thermometer Mode.
3. Hold down (E) until **SET Hold** appears on the display and then the current settings start to flash.
4. Press (D) to move the flashing between the temperature value and barometric pressure value, to select the one you want to calibrate.
5. Use (A) (+) and (C) (-) to select the temperature and barometric pressure value display units as shown below.
  - Temperature 0.1°C (0.2°F)
  - Barometric Pressure 1 hPa (0.05 inHg)
  - To return the currently flashing value to its initial factory default setting, press (A) and (C) at the same time. **OFF** will appear at the flashing location for about one second, followed by the initial default value.
6. Press (E) to return to the Barometer/Thermometer Mode screen.

E-44

### Barometer and Thermometer Precautions

- The pressure sensor built into this watch measures changes in air pressure, which you can then apply to your own weather predictions. It is not intended for use as a precision instrument in official weather prediction or reporting applications.
- Sudden temperature changes can affect pressure sensor readings.
- Temperature measurements are affected by your body temperature (while you are wearing the watch), direct sunlight, and moisture. To achieve a more accurate temperature measurement, remove the watch from your wrist, place it in a well ventilated location out of direct sunlight, and wipe all moisture from the case. It takes approximately 20 to 30 minutes for the case of the watch to reach the actual surrounding temperature.

E-45

## Taking Altitude Readings

The watch displays altitude values based on air pressure readings taken by a built-in pressure sensor.

### How the Altimeter Measures Altitude

The altimeter can measure altitude based on its own preset values (initial default method) or using a reference altitude specified by you.

#### When you measure altitude based on preset values

Data produced by the watch's barometric pressure sensor is converted to approximate altitude based on ISA (International Standard Atmosphere) conversion values stored in watch memory.


#### When you measure altitude using a reference altitude specified by you

After you specify a reference altitude, the watch uses that value to convert barometric pressure readings to altitude (page E-52).

- When mountain climbing, you can specify a reference altitude value in accordance with a marker along the way or altitude information from a map. After that, the altitude readings produced by the watch will be more accurate than they would without a reference altitude value.



### To take an altimeter reading

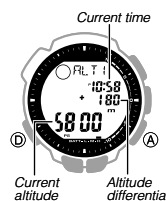

1. Make sure the watch is in the Timekeeping Mode or any one of the sensor modes.
  - The sensor modes are: Digital Compass Mode, Barometer/Thermometer Mode, and Altimeter Mode.
2. Press (A) to start Altimeter measurement.
  - **ALTI** will appear on the display, indicating that Altimeter measurement is in progress. The first reading will appear on the display after about four or five seconds.
  - The current altitude value is displayed in units of 5 meters (20 feet).
  - After the first reading is obtained, the watch continues to take altimeter readings automatically every five seconds for the first three minutes, and then every two minutes after that (under initial default settings).
  - You can use the procedure under "To select the altitude auto measurement method" (page E-49) to specify the altitude auto measurement method you want to use.
3. After you are finished using the Altimeter, press (D) to return to the Timekeeping Mode and stop auto measurement.
  - The watch will return to the Timekeeping Mode automatically if you do not perform any operation for about 24 hours after entering the Altimeter Mode (under initial default settings).

E-46

E-47

## Note

- The measurement range for altitude is -700 to 10,000 meters (-2,300 to 32,800 feet).
- The displayed altitude value changes to ---- if an altitude reading falls outside the measurement range. An altitude value will reappear as soon as the altitude reading is within the allowable range.
- Normally, displayed altitude values are based on the watch's preset conversion values. You also can specify a reference altitude value, if you want. See "Specifying a Reference Altitude Value" (page E-52).
- You can change the unit for displayed altitude values to either meters (m) or feet (ft). See "To specify temperature, barometric pressure, and altitude units" (page E-61).

## Selecting an Altitude Auto Measurement Method

You can select either of the following two altitude auto measurement methods.

**0'05**: Readings at five-second intervals for about one hour

**2'00**: Readings at five-second intervals for the first three minutes followed by two-minute intervals for approximately 24 hours

## Note

If you do not perform any button operation while in the Altimeter Mode, the watch will return to the Timekeeping Mode automatically after 24 hours (altitude auto measurement method: **2'00**) or after one hour (altitude auto measurement method: **0'05**).

## To select the altitude auto measurement method



- In the Altimeter Mode, hold down **(E)** until **SET Hold** appears on the display and then **Hold** disappears.
- Press **(D)** to display the current altitude auto measurement method setting.
  - This will cause either **0'05** or **2'00** to flash on the display.
- Press **(A)** to toggle the altitude auto measurement method setting between **0'05** and **2'00**.
- Press **(E)** to exit the setting screen.

E-48

E-49

## Using the Altitude Differential Value

Altitude differential



The Altimeter Mode screen includes an altitude differential value that shows the change in altitude from a reference point you specify. The altitude differential value is updated each time the watch takes an altitude reading.

- The range of the altitude differential value is -3,000 meters (-9,980 feet) to 3,000 meters (9,980 feet).
- is displayed in place of the altitude differential value whenever the measured value is outside the allowable range.
- See "Using the Altitude Differential Value While Mountain Climbing or Hiking" (page E-51) for some real-life examples of how to use this feature.

## To specify the altitude differential start point

Altitude differential



In the Altimeter Mode, press **(E)**.



- The watch will take an altitude reading and register the result as the altitude differential value start point. The altitude differential value will be reset to zero at this time.

E-50

## Using the Altitude Differential Value While Mountain Climbing or Hiking

After you specify the altitude differential start point while mountain climbing or hiking, you easily can measure the change in the altitude between that point and other points along the way.

## To use the altitude differential value

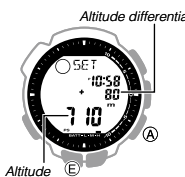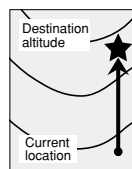

- In the Altimeter Mode, check to make sure that an altitude reading is on the display.
  - If an altitude reading is not displayed, press **(A)** to take one. See "To take an altimeter reading" (page E-47) for details.
- Use the contour lines on your map to determine the difference in altitude between your current location and your destination.
- In the Altimeter Mode, press **(E)** to specify your current location as the altitude differential start point.
  - The watch will take an altitude reading and register the result as the altitude differential value start point. The altitude differential value will be reset to zero at this time.
- While comparing the altitude difference you determined on the map and the watch's altitude differential value, advance towards your destination.
  - If the map shows that the difference in altitude between your location and your destination is +80 meters for example, you know you will be nearing your destination when the displayed altitude differential value shows +80 meters.

E-51

## Specifying a Reference Altitude Value

The altitude readings produced by this watch are subject to error caused by changes in air pressure. Because of this, we recommend that you update the reference altitude value whenever one is available during your climb. After you specify a reference altitude value, the watch adjusts its air-pressure-to-altitude conversion calculation accordingly.

## To specify a reference altitude value



- In the Altimeter Mode, hold down **(E)** until **SET Hold** appears on the display and then **Hold** disappears.
- Press **(A)** (+) or **(C)** (-) to change the current reference altitude value by 5 meters (or 20 feet).
  - Change the reference altitude value to an accurate altitude reading that you get from a map or other source.
  - You can set the reference altitude value within the range of -10,000 to 10,000 meters (-32,800 to 32,800 feet).
  - Pressing **(A)** and **(C)** at the same time returns to **OFF** (no reference altitude value), so the watch performs air pressure to altitude conversions based on preset data only.
- Press **(E)** to exit the setting screen.

E-52

## Types of Altitude Data

The watch can maintain two types of altitude data in its memory: manual measurement records, and auto save values (low altitude, high altitude, total ascent, total descent).

- Use the Data Recall Mode to view data stored in memory. See "Viewing Altitude Records" (page E-64) for details.

## Manual Measurement Records

Any time you perform the procedure below in the Altimeter Mode, the watch will create and store a record with the currently displayed altitude reading, along with the date and time the reading was taken. There is enough memory to store up to 14 manual measurement records, which are numbered from **REC 1** through **REC 14**.

## To save a manual measurement



- In the Altimeter Mode, check to make sure that an altitude reading is on the display.
  - If an altitude reading is not displayed, press **(A)** to take one. See "To take an altimeter reading" (page E-47) for details.
- Hold down **(A)** until **REC Hold** appears on the display and then changes to **REC**.
  - This will save the currently displayed altitude reading in a manual measurement record, along with the measurement time and date.
  - The watch will return to the Altimeter Mode screen automatically after the save operation is complete.
  - There is enough memory to store up to 14 manual measurement records. If there are already 14 manual measurement records in memory, the above operation will cause the oldest record to be deleted automatically to make room for the new one.

E-53

## Auto Save Values

Two sets of auto save values (Set 1 and Set 2) are maintained in watch memory.


Set 1	Set 2
High Altitude ( <b>MAX-1</b> )	High Altitude ( <b>MAX-2</b> )
Low Altitude ( <b>MIN-1</b> )	Low Altitude ( <b>MIN-2</b> )
Total Ascent ( <b>ASC-1</b> )	Total Ascent ( <b>ASC-2</b> )
Total Descent ( <b>DSC-1</b> )	Total Descent ( <b>DSC-2</b> )

- These values are checked and updated automatically by the watch as altitude auto measurements are taken.

## How High and Low Values Are Updated

While the watch is in the Altimeter Mode, altitude readings are taken automatically at the interval specified by the altitude auto measurement method (page E-48). With each reading, the watch compares the current reading against the **MAX** (**MAX-1** and **MAX-2**) (high altitude) and **MIN** (**MIN-1** and **MIN-2**) (low altitude) values. It will replace the **MAX** value if the current reading is greater than **MAX**, or the **MIN** value if the current reading is less than **MIN**.

## How Total Ascent/Descent Values Are Updated

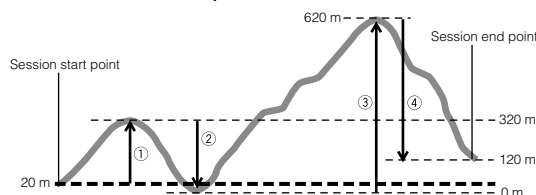

The total ascent and total descent values produced by an Altimeter Mode measurement session during the example climb illustrated above are calculated as follows.

Total Ascent: ① (300 m) + ③ (620 m) = 920 m

Total Descent: ② (320 m) + ④ (500 m) = 820 m

- Entering the Altimeter Mode starts a new altitude auto measurement session, but it does not reset the current **ASC** (**ASC-1** and **ASC-2**) and **DSC** (**DSC-1** and **DSC-2**) values or change them in any way. This means that the starting **ASC** and **DSC** values for a new Altimeter Mode auto measurement session are the values that currently are in memory. Each time you complete an Altimeter Mode auto measurement session by returning to the Timekeeping Mode, the total ascent value of the current session (920 meters in the above example) is added to the session's starting **ASC** value. Also, the total descent value of the current auto measurement session (-820 meters in the above example) is added to the session's starting **DSC** value.

E-54

E-55

\* Note that any change in elevation when ascending that is less than 15 meters (49 feet) is not added to the total ascent value for the current Altimeter Mode auto measurement session. Also, any change in elevation when descending that is less than -15 meters (-49 feet) is not added to the total descent value for the current Altimeter Mode auto measurement session.

**Note**

\* The high altitude, low altitude, total ascent, and total descent values are retained in memory when you exit the Altimeter Mode. To clear values, perform the procedure under "To clear the contents of a specific memory area" (page E-67).

**Using Auto Save Values**

The watch maintains two independent sets of auto save values as shown below.

Set 1	Set 2
High Altitude ( <b>MAX-1</b> )	High Altitude ( <b>MAX-2</b> )
Low Altitude ( <b>MIN-1</b> )	Low Altitude ( <b>MIN-2</b> )
Total Ascent ( <b>ASC-1</b> )	Total Ascent ( <b>ASC-2</b> )
Total Descent ( <b>DSC-1</b> )	Total Descent ( <b>DSC-2</b> )

The values in Set 1 and Set 2 can be cleared independently of each other. This means you can use them to keep track of daily and cumulative data as described in the example below.

**Example:** Keeping track of data on a three-day climb

**Day 1**

Clear both Set 1 and Set 2, and start your Day 1 climb.

At the end of the day, both sets of auto save values contain the same data (**MAX-1** = **MAX-2**, **MIN-1** = **MIN-2**, etc.).

**How does the altimeter work?**

Generally, air pressure and temperature decrease as altitude increases. This watch bases its altitude measurements on International Standard Atmosphere (ISA) values stipulated by the International Civil Aviation Organization (ICAO). These values define relationships between altitude, air pressure, and temperature.

Altitude	Air Pressure	Temperature
4000 m	616 hPa	About 8 hPa per 100 m
3500 m	701 hPa	About 9 hPa per 100 m
3000 m	795 hPa	About 10 hPa per 100 m
2500 m	899 hPa	About 11 hPa per 100 m
2000 m	1013 hPa	About 12 hPa per 100 m
1500 m		
1000 m		
500 m		
0 m		

About 6.5°C per 1000 m

14000 ft.	19.03 inHg	About 0.15 inHg per 200 ft.
12000 ft.	22.23 inHg	About 0.17 inHg per 200 ft.
8000 ft.	25.84 inHg	About 0.192 inHg per 200 ft.
4000 ft.	29.92 inHg	About 0.21 inHg per 200 ft.
0 ft.		

About 3.6°F per 1000 ft.

Source: International Civil Aviation Organization

**Day 2**

Clear only Set 1, and start your Day 2 climb. At the end of the day, the values in Set 1 (**MAX-1**, **MIN-1**, **ASC-1**, **DSC-1**) will show the results of Day 2 only. In Set 2, **MAX-2** and **MIN-2** will show the high altitude and low altitude reached over the two-day span. **ASC-2** will show the total ascent for the two days (Day 1 + Day 2) and **DSC-2** will show the total descent for the two days.

**Day 3**

Clear only Set 1, and start your Day 3 climb. At the end of the day, the values in Set 1 will show the results of Day 3 only. In Set 2, **MAX-2** and **MIN-2** will show the high altitude and low altitude reached over the three-day span. **ASC-2** will show the total ascent for the three days (Day 1 + Day 2 + Day 3) and **DSC-2** will show the total descent for the three days.

\* For details about clearing altitude data, see "To clear the contents of a specific memory area" (page E-67).


\* Note that the following conditions will prevent you from obtaining accurate readings:

*When air pressure changes because of changes in the weather*

*Extreme temperature changes*

*When the watch itself is subjected to strong impact*

There are two standard methods of expressing altitude: Absolute altitude and relative altitude. Absolute altitude expresses an absolute height above sea level. Relative altitude expresses the difference between the height of two different places.

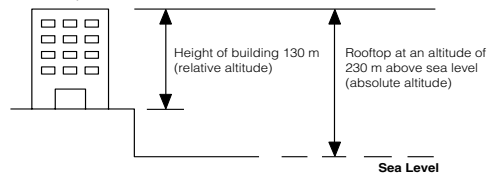


**Altimeter Precautions**

- \* This watch estimates altitude based on air pressure. This means that altitude readings for the same location may vary if air pressure changes.
- \* The semiconductor pressure sensor used by the watch for altitude measurements is also affected by temperature. When taking altitude measurements, do not subject the watch to temperature changes.
- \* Do not rely upon this watch for altitude measurements or perform button operations while sky diving, hang gliding, or paragliding, while riding a gyrocopter, glider, or any other aircraft, or while engaging in any other activity where there is the chance of sudden altitude changes.
- \* Do not use this watch for measuring altitude in applications that demand professional or industrial level precision.
- \* Remember that the air inside of a commercial aircraft is pressurized. Because of this, the readings produced by this watch will not match the altitude readings announced or indicated by the flight crew.

**Specifying Temperature, Barometric Pressure, and Altitude Units**

Use the procedure below to specify the temperature, barometric pressure, and altitude units to be used in the Barometer/Thermometer Mode and the Altimeter Mode.

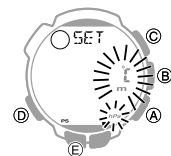

**Important!**

When **TYO** (Tokyo) is selected as the Home City, the altitude unit is set automatically to meters (**m**), the barometric pressure unit to hectopascals (**hPa**), and the temperature unit to Celsius (**°C**). These settings cannot be changed.

**To specify temperature, barometric pressure, and altitude units**

1. In the Timekeeping Mode, hold down **(E)** until **SET** Hold appears on the display and then the city code starts to flash.
2. Press **(D)** as many times as necessary until **SET** appears on the display.
  - \* See the sequence in step 2 of the procedure under "To change the current time and date settings" (page E-23) for information about how to scroll through setting screens.

3. Perform the operations below to specify the units you want.

To specify this unit:	Press this key:	To toggle between these settings:
Altitude	<b>(A)</b>	<b>m</b> (meters) and <b>ft</b> (feet)
Barometric Pressure	<b>(B)</b>	<b>hPa</b> (hectopascals) and <b>inHg</b> (inches of mercury)
Temperature	<b>(C)</b>	<b>°C</b> (Celsius) and <b>°F</b> (Fahrenheit)

4. After all of the settings are the way you want, press **(E)** to exit the setting screen.

- \* To return to the screen in step 1, press **(E)** again.

**Precautions Concerning Simultaneous Measurement of Altitude and Temperature**


Though you can perform altitude and temperature measurements at the same time, you should remember that each of these measurements requires different conditions for best results. With temperature measurement, it is best to remove the watch from your wrist in order to eliminate the effects of body heat. In the case of altitude measurement, on the other hand, it is better to leave the watch on your wrist, because doing so keeps the watch at a constant temperature, which contributes to more accurate altitude measurements.

- \* To give altitude measurement priority, leave the watch on your wrist or in any other location where the temperature of the watch is kept constant.
- \* To give temperature measurement priority, remove the watch from your wrist and allow it to hang freely from your bag or in another location where it is not exposed to direct sunlight. Note that removing the watch from your wrist can affect pressure sensor readings momentarily.




## Viewing Altitude Records

Use the Data Recall Mode to view manual saved altitude readings and automatically saved high altitude, low altitude, total ascent, and total descent values. Altitude data records are created and saved in the Altimeter Mode.

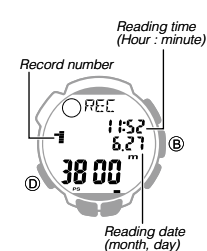


### To view altitude records


- Use **(D)** to select the Data Recall Mode (**REC**) as shown on page E-16.
  - About one second after **REC** appears on the display, the display will change to show the first record of the memory area you were viewing when you last exited the Data Recall Mode.
- Use **(B)** to select the memory area you want.



- Use **(A)** and **(C)** to scroll through the screens for an area and display the one you want.

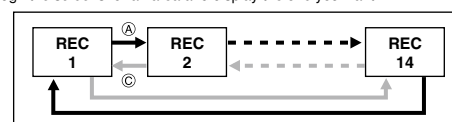

Manually saved records

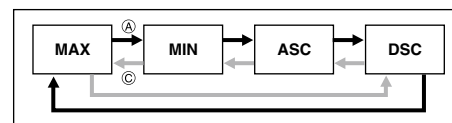

Auto saved values

- Records of manually saved altitude values (**REC 1** through **REC 14**) and the **MAX** and **MIN** automatically saved altitude values include the date (month, day) and time (hour, minute) that the data was recorded.

E-64

E-65

- Records of the **ASC** and **DSC** automatically save altitude values include the date (month, day) and year that the data was recorded.
- For detailed information about auto saved values, see "Auto Save Values" (page E-54).

- After you are finished viewing data, use **(D)** to exit the Data Recall Mode.


- will be displayed if data has been deleted or if there is no corresponding data due to error, etc. In such cases, total ascent (**ASC**) and total descent (**DSC**) values will show zero.
- When the total ascent (**ASC**) or total descent (**DSC**) exceeds 99,995 meters (or 327,980 feet), the applicable value will restart from zero.



- When the total ascent (**ASC**) or total descent (**DSC**) value becomes five digits long, the rightmost (ones) digit is shown in the lower right of the display. The nearby illustration shows the display when the value of **ASC-1** is 99995 meters.

### To clear the contents of a specific memory area

- Use **(D)** to enter the Data Recall Mode.

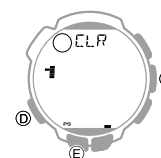

- Use **(B)** to select the memory area you want to clear.
  - Note that the contents of the memory area you select will be deleted as soon as you perform step 3 below. The clear operation cannot be undone, so double check to make sure you really want to delete the contents of the memory area you select here.

- Hold down **(E)** until **CLR Hold** appears on the display and then **Hold disappears**.

- This deletes the record you displayed in step 2.
- Release **(E)** after **CLR** appears on the display.

E-66

E-67

## Viewing Tide and Moon Data

The Tide/Moon Data Mode shows tide and Moon information for the Home City you selected in the Timekeeping Mode.

- See "Moon Phase Indicator" (page E-73) for information about the moon phase indicator and "Tide Graph" (page E-75) for information about the tide graph.
- All of the operations in this section are performed in the Tide/Moon Data Mode (page E-16).

### Note

- It takes about two seconds to calculate tide graph data. You will not be able to display a setting screen while data calculation is in progress.
- Moon age is calculated to an accuracy of  $\pm 1$  day.

### Tide Data

The Tide Graph that appears first when you enter the Tide/Moon Data Mode shows the data at 6:00 a.m. for your currently selected Home City (tide site) on the current date, according to the Timekeeping Mode. From then you can specify another time on the same date.

- If the tide data is not correct, check your Timekeeping Mode settings and correct them if necessary.
- If you feel that the information shown by the Tide Graph is different from actual tide conditions, you need to adjust the high tide time. See "Adjusting the High Tide Time" (page E-71) for more information.

E-68

E-69

### To view Moon Data for a particular date, or Tide Data for a particular date and time

- In the Tide/Moon Data Mode, use **(A)** (+) and **(C)** (-) to scroll to the date whose tide and Moon information you want to view.
  - After you select a date, the watch starts to calculate Moon and tide data for the date you selected. The calculation operation takes about two seconds, and is indicated by movement in the Moon Phase indicator and the Tide Graph on the display. You can use **(A)** and **(C)** to change to another date while a calculation operation is in progress.
  - After calculation is complete, the Moon information (Moon age and phase) and tide information (current tide level and tide range) will be displayed for the date you selected.

- While the Moon information (Moon age and phase) and tide information (tide level and tide range for the current date) are displayed, you can press **(B)** (+) to advance the displayed tide range by one hour.

- You also can use **(A)** (+) and **(C)** (-) to change the date.
- Update of the Moon Phase indicator and the Tide Graph is stopped while any of the following is occurring.
  - During button operation
  - While an alarm is sounding
  - While a countdown beeper is sounding
  - During display illumination
  - During a 2-hour barometric pressure reading operation



### Moon Data

The Moon phase and Moon age information that appears first when you enter the Tide/Moon Data Mode shows the data at noon for your currently selected Home City on the current date, according to the Timekeeping Mode. After that you can specify another date to view data.

- If the Moon data is not correct, check your Timekeeping Mode settings and correct them if necessary.
- If the Moon phase indicator shows a phase that is a mirror image of the actual Moon phase in your area, you can use the procedure under "Reversing the Displayed Moon Phase" (page E-72) to change it.



### To enter the Tide/Moon Data Mode

Use **(D)** to select the Tide/Moon Data Mode (**TIDE**) as shown on page E-16.

- About one second after **TIDE** appears on the display, the display will change to show the moon age.

### Adjusting the High Tide Time

Use the following procedure to adjust the high tide time within a particular date. You can find out high tide information for your area from a tide table, the Internet, or your local newspaper.

#### To adjust the high tide time



- In the Tide/Moon Data Mode, use **(A)** (+) and **(C)** (-) to scroll to the date whose high tide time you want to change.
- Hold down **(E)** until **SET Hold** appears on the display and then the hour digits start to flash.
- Press **(A)** (+) and **(C)** (-) to change the hour setting.
- When the hour is the setting you want, press **(D)**.
  - This will cause the minute digits to flash.
- Press **(A)** (+) and **(C)** (-) to change the minute setting.
- When the minute setting is the way you want, press **(E)** to exit the adjustment screen and return to the Tide/Moon Data Mode screen.
  - Pressing **(A)** and **(C)** at the same time while the time adjustment screen is displayed (steps 3 through 6 above) will return the high tide time to its initial factory default setting.
  - Changing the Home City setting in the Timekeeping Mode returns the high tide time to its initial value.
  - The high tide time setting is not affected by the DST (summer time) setting of the Timekeeping Mode.
  - On some days, there are two high tides. With this watch, you can adjust the first high tide time only. The second high tide time for that day is adjusted automatically based on the first high tide time.

E-70


E-71

## Reversing the Displayed Moon Phase

The left-right (east-west) appearance of the Moon depends on whether the Moon is north of you (northerly view) or south of you (southerly view) as you view it. You can use the procedure below to reverse the displayed Moon phase so it matches the actual appearance of the Moon where you are located.

- To determine the viewing direction of the Moon, use a compass to take a direction reading of the Moon at its meridian passage.
- For information about the Moon phase indicator, see "Moon Phase Indicator" (page E-73).

### To reverse the displayed Moon phase

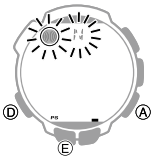

- In the Tide/Moon Data Mode, hold down (E) until SET Hold appears on the display and then the hour digits start to flash.
- Press (D) twice.
  - This will cause the Moon phase indicator to flash. This is the indicator switching screen.
- Press (A) to toggle the Moon phase indicator between the southerly view (indicated by ♁) and northerly view (indicated by ☾).
  - Northerly view: Moon is north of you.
  - Southerly view: Moon is south of you.
- When the Moon phase indicator setting is the way you want, press (E) to exit the switching screen and return to the Tide/Moon Data Mode screen.


## Moon Phases and Moon Age

The Moon goes through a regular 29.53-day cycle. During each cycle, the Moon appears to wax and wane as the relative positioning of the Earth, Moon, and Sun changes. The greater the angular distance between the Moon and the Sun,\* the more we see illuminated.

\* The angle to the Moon in relation to the direction at which the Sun is visible from the Earth.

This watch performs a rough calculation of the current Moon age starting from day 0 of the moon age cycle. Since this watch performs calculations using integer values only (no fractions), the margin for error of the displayed Moon age is ± 1 day.

## Moon Phase Indicator

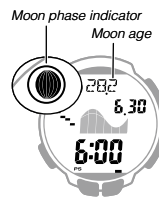

The Moon phase indicator of this watch indicates the current phase of the Moon as shown below. It is based on the view of the left side of the moon at meridian transit from the northern hemisphere of the Earth. If the appearance of the Moon phase indicator is reversed from the actual Moon as viewed from your location, you can use the procedure under "To reverse the displayed Moon phase" (page E-72) to change the indicator.

(part you cannot see) Moon phase (part you can see)

Moon Phase Indicator								
Moon Age	28.7-29.8 0.0-0.9	1.0-2.7	2.8-4.6	4.7-6.4	6.5-8.3	8.4-10.1	10.2-12.0	12.1-13.8
Moon Phase	New Moon				First Quarter (Waxing)			
Moon Phase Indicator								
Moon Age	13.9-15.7	15.8-17.5	17.6-19.4	19.5-21.2	21.3-23.1	23.2-24.9	25.0-26.8	26.9-28.6
Moon Phase	Full Moon				Last Quarter (Waning)			

## Tidal Movements


Tides are the periodic rise and fall of the water of oceans, seas, bays, and other bodies of water caused mainly by the gravitational interactions between the Earth, Moon and Sun. Tides rise and fall about every six hours. The Tide Graph of this watch indicates tidal movement based on the Moon's transit over a meridian and the lunital interval. The Tide Graph calculates and graphically represents current tide conditions in your Home City or a port city in the vicinity of the Home City based on longitudes, lunar day length, and lunital interval preset in watch memory, as shown below.

## Tide Graph

The Tide Graph graphically represents the current tide condition using one of three patterns that represent spring tide, intermediate tide, and neap tide, as shown below.

Tide Name	Graph	Description
Spring Tide		Large difference between high tide and low tide. Occurs a few days before and after a New Moon and Full Moon.
Intermediate Tide		Medium difference between high tide and low tide.
Neap Tide		Small difference between high tide and low tide. Occurs a few days before and after the first quarter and last quarter of a half moon.

- The Tide Graph flashes as shown below to indicate the tide range.

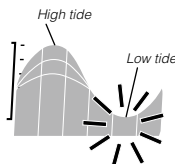


## Lunital Interval

Theoretically, high tide is at the Moon's transit over the meridian and low tide is about six hours later. Actual high tide occurs somewhat later, due to factors such as viscosity, friction, and underwater topography. Both the time differential between the Moon's transit over the meridian until high tide and the time differential between the Moon's transit over the meridian until low tide are known as the "lunital interval".

## To set an alarm time




- In the Alarm Mode, use (A) and (C) to scroll through the alarm screens until the one whose time you want to set is displayed.

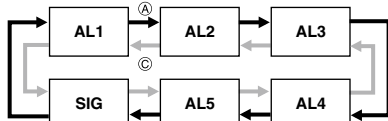

- Hold down (E) until SET Hold appears on the display and then the current settings start to flash.
  - This is the setting screen.

- Press (D) to move the flashing between the hour and minute settings.
- While a setting is flashing, use (A) (+) and (C) (-) to change it.
  - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).
- Press (E) to exit the setting screen.

## Using the Alarm

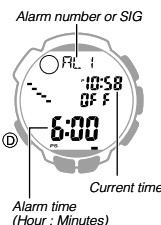


You can set five independent daily alarms. When an alarm is turned on, an alarm will sound for about 10 seconds each day when the time in the Timekeeping Mode reaches the preset alarm time. This is true even if the watch is not in the Timekeeping Mode. You can also turn on an Hourly Time Signal, which will cause the watch to beep twice every hour on the hour.

### To enter the Alarm Mode

- Use (D) to select the Alarm Mode (ALM) as shown on page E-16.
- About one second after ALM appears on the display, the display will change to show an alarm number (AL1 through AL5) or the SIG indicator. The alarm number indicates an alarm screen. SIG is shown when the Hourly Time Signal screen is on the display.
  - When you enter the Alarm Mode, the data you were viewing when you last exited the mode appears first.

## To turn an alarm and the Hourly Time Signal on and off

- In the Alarm Mode, use (A) and (C) to select an alarm or the Hourly Time Signal.
- When the alarm or the Hourly Time Signal you want is selected, press (B) to turn it on and off.

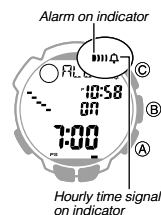


- An alarm on indicator will be on the display whenever any alarm (one or multiple) is turned on. An hourly time signal on indicator is displayed while the hourly time signal is on.
- If any alarm is on, the alarm on indicator is shown on the display in all modes.

## To stop the alarm

Press any button.

## Using the Stopwatch

The stopwatch measures elapsed time, split times, and two finishes.

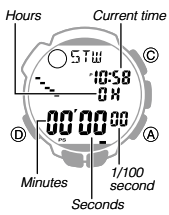


### To enter the Stopwatch Mode

Use **(D)** to select the Stopwatch Mode (STW) as shown on page E-16.


### To perform an elapsed time operation



### To pause at a split time



### To measure two finishes

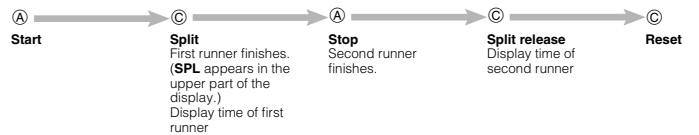

### Note

- The Stopwatch Mode can indicate elapsed time up to 23 hours, 59 minutes, 59.99 seconds.
- Once started, stopwatch timing continues until you press **(C)** to stop it, even if you exit the Stopwatch Mode to another mode and even if timing reaches the stopwatch limit defined above.
- Exiting the Stopwatch Mode while a split time is frozen on the display clears the split time and returns to elapsed time measurement.

E-80

E-81

## Using the Countdown Timer

In addition to normal countdown timing, you can press a button during a countdown operation to reset the timer and restart timing. This capability comes in handy in the case of a yacht race, for example, in which a warning signal is given five minutes before the start of a race.


### To enter the Countdown Timer Mode

Use **(D)** to select the Countdown Timer Mode (TMR) as shown on page E-16.

### Countdown Timer Example

#### Using the Normal Countdown Timer


- Progress beeper: OFF



### Reset Time

#### Using a Reset Time

- Progress beeper: ON
- ① Reset time start alert: Once each second for final 10 seconds
- ② Time up alert: Each minute

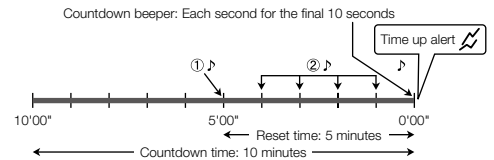

### Timer Settings

#### Countdown Time

- You can select from one minute to 60 minutes.
- You can select in one-minute steps.

#### Reset Time

- You can select from one minute to five minutes, within the range of the timer time.
- You can select in one-minute steps.

E-82

E-83

### Note

- See "To configure countdown timer settings" for information about setting up the timer.
- When the progress beeper is off, only the countdown beeper and time up alert sound.


### To configure countdown timer settings




- Enter the Countdown Timer Mode.
  - If a countdown is in progress (indicated by the seconds counting down), press **(A)** to stop it and then press **(C)** to reset to the current countdown start time.
  - If a countdown is paused, press **(C)** to reset to the current countdown start time.
- Hold down **(E)** until the minute setting of the current countdown start time starts to flash. This is the setting screen.
- Press **(D)** to toggle the display between the countdown time (TMR) or reset time (RST).
- When the setting you want is flashing, use **(A)** (+) and **(C)** (-) to change the minutes setting.
- Press **(E)** to exit the setting screen.

### To use the countdown timer

#### Using the Countdown Timer as a Normal Timer



#### Using a Reset Time



- The watch beeps every second for the last 10 seconds before the end of the countdown.
- The final 10-second countdown beeps and time up alert sound even if the watch is not in the Countdown Timer Mode.

### To turn the progress beeper on and off


Pressing **(B)** while the countdown start time is on the display or while a countdown timer operation is in progress in the Countdown Timer Mode toggles progress beeper operation on (- ■■ displayed) and off (- ■■ not displayed).

E-84

E-85

## Checking the Current Time in a Different Time Zone

You can use the World Time Mode to view the current time in one of 31 time zones (48 cities) around the globe. The city that is currently selected in the World Time Mode is called the "World Time City".

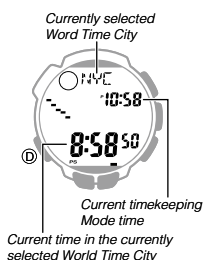


### To enter the World Time Mode

Use **(D)** to select the World Time Mode (WT) as shown on page E-16.  
 • About one second after WT appears on the display, the display will change to show the city code of the currently selected World Time City.

### To view the time in another time zone

In the World Time Mode, use **(A)** (East) and **(C)** (West) to scroll through city codes.

### To specify standard time or daylight saving time (DST) for a city

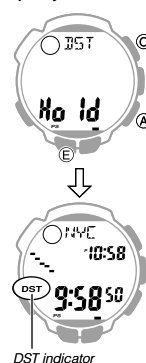

- In the World Time Mode, use **(A)** (East) and **(C)** (West) to scroll through the available city codes.
  - Keep scrolling until the city code whose Standard Time/Daylight Saving Time setting you want to change is displayed.
- Hold down **(E)** until **DST Hold** appears on the display and then **Hold** disappears.
  - This toggles the city code you selected in step 1 between Daylight Saving Time (DST indicator displayed) and standard time (DST indicator not displayed).
  - Using the World Time Mode to change the DST setting of the city code that is selected as your Home City also will change the Timekeeping Mode time DST setting.
  - Note that you cannot switch between standard time/daylight saving time (DST) while **UTC** is selected as the World Time City.
  - Note that the standard time/daylight saving time (DST) setting affects only the currently selected time zone. Other time zones are not affected.

E-86

E-87

## Illumination



The display of the watch is illuminated for easy reading in the dark. The watch's auto light switch turns on illumination automatically when you angle the watch towards your face.

- The auto light switch must be turned on (page E-90) for it to operate.

### To turn on illumination manually

Press **L** in any mode to illuminate the display.

- You can use the procedure below to select either 1.5 seconds or three seconds as the illumination duration. When you press **L**, the display will remain illuminated for about 1.5 seconds or three seconds, depending on the current illumination duration setting.
- The above operation turns on illumination regardless of the current auto light switch setting.
- Illumination is disabled while configuring sensor measurement mode settings, and during bearing sensor calibration.

### To change the illumination duration

- In the Timekeeping Mode, hold down **E** until **SET Hold** appears and on the display then the city code starts to flash.
- Use **D** to cycle through the settings on the display until the current illumination duration (**LT1** or **LT3**) is shown.
  - See the sequence in step 2 of the procedure under "To change the current time and date settings" (page E-23) for information about how to scroll through setting screens.


E-88

- Press **A** to toggle the illumination duration between three seconds (**LT3** displayed) and 1.5 seconds (**LT1** displayed).
- After all of the settings are the way you want, press **E** to exit the setting screen.
  - To return to the screen in step 1, press **E** again.

### About the Auto Light Switch

Turning on the auto light switch causes illumination to turn on, whenever you position your wrist as described below in any mode.

**Moving the watch to a position that is parallel to the ground and then tilting it towards you more than 40 degrees causes illumination to turn on.**

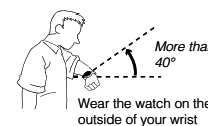

### Warning!

- Always make sure you are in a safe place whenever you are reading the display of the watch using the auto light switch. Be especially careful when running or engaged in any other activity that can result in accident or injury. Also take care that sudden illumination by the auto light switch does not startle or distract others around you.
- When you are wearing the watch, make sure that its auto light switch is turned off before riding on a bicycle or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury.

## Note

- This watch features a "Full Auto EL Light", so the auto light switch operates only when available light is below a certain level. It does not illuminate the display under bright light.
- The auto light switch is always disabled, regardless of its on/off setting, when any one of the following conditions exists.

While an alarm is sounding

During sensor measurement

While a bearing sensor calibration operation is being performed in the Digital Compass Mode

While the Moon age or tide information is being calculated

### To turn the auto light switch on and off



Auto light switch on indicator

In the Timekeeping Mode, hold down **L** for about three seconds to toggle the auto light switch on (**AUTO** displayed) and off (**AUTO** not displayed).

- The auto light switch on indicator (**AUTO**) is on the display in all modes while the auto light switch is turned on.
- The auto light switch turns off automatically whenever battery power drops to Level 4 (page E-11).

E-90

## Illumination Precautions

- The electro-luminescent panel that provides illumination loses power after very long use.
- Illumination may be hard to see when viewed under direct sunlight.
- Illumination turns off automatically whenever an alarm sounds.
- Frequent use of illumination runs down the battery.

### Auto light switch precautions

- Wearing the watch on the inside of your wrist, movement of your arm, or vibration of your arm can cause frequent activation of the auto light switch and illumination of the display. To avoid running down the battery, turn off the auto light switch whenever engaging in activities that might cause frequent illumination of the display.
- Note that wearing the watch under your sleeve while the auto light switch is turned on can cause frequent illumination of the display and can run down the battery.



- Illumination may not turn on if the face of the watch is more than 15 degrees above or below parallel. Make sure that the back of your hand is parallel to the ground.
- Illumination turns off after the preset illumination duration (page E-88), even if you keep the watch pointed towards your face.
- Static electricity or magnetic force can interfere with proper operation of the auto light switch. If illumination does not turn on, try moving the watch back to the starting position (parallel with the ground) and then tilt it back towards your face again. If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again.
- You may notice a very faint clicking sound coming from the watch when it is shaken back and forth. This sound is caused by mechanical operation of the auto light switch, and does not indicate a problem with the watch.


## Other Settings

The button operation tone sounds any time you press one of the watch's buttons. You can turn the button operation tone on or off as desired.

- Even if you turn off the button operation tone, the alarm, Hourly Time Signal, and Countdown Timer Mode alarm all operate normally.

### To turn the button operation tone on and off

- In the Timekeeping Mode, hold down **E** until **SET Hold** appears on the display and then the city code starts to flash.
- Use **D** to cycle through settings on the display until the current button operation tone (**MUTE** or **BEEP**) is displayed.
  - See the sequence in step 2 of the procedure under "To change the current time and date settings" (page E-23) for information about how to scroll through setting screens.
- Press **A** to toggle the button operation tone on (**BEEP**) and off (**MUTE**).
- After all of the settings are the way you want, press **E** to exit the setting screen.
  - To return to the screen in step 1, press **E** again.

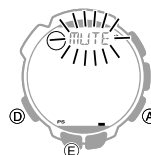


Mute indicator

### Note

- The mute indicator is displayed in all modes when the button operation tone is turned off.

E-92

### To turn Power Saving on and off

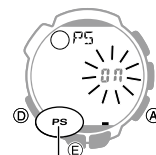

Power saving on indicator

- In the Timekeeping Mode, hold down **E** until **SET Hold** appears on the display and then the city code starts to flash.
- Use **D** to cycle through the settings on the display until the current power saving setting (**On** or **OFF**) is displayed.
  - See the sequence in step 2 of the procedure under "To change the current time and date settings" (page E-23) for information about how to scroll through setting screens.
- Press **A** to toggle Power Saving on (**On**) and off (**OFF**).
- After all of the settings are the way you want, press **E** to exit the setting screen.
  - To return to the screen in step 1, press **E** again.

### Note

- The Power Saving on indicator (**PS**) is on the display in all modes while Power Saving is turned on.

## Troubleshooting

### Time Setting

#### The current time setting is off by hours.

Your Home City setting may be wrong (page E-20). Check your Home City setting and correct it, if necessary.

#### The current time setting is off by one hour.

You may need to change your Home City's standard/daylight saving time (DST) setting. Use the procedure under "To change the current time and date settings" (page E-22) to change the standard time/daylight saving time (DST) setting.

### Sensor modes

#### I can't change the temperature, barometric pressure, and altitude units.

When **TYO** (Tokyo) is selected as the Home City, the altitude unit is set automatically to meters (m), the barometric pressure unit to hectopascals (hPa), and the temperature unit to Celsius (°C). These settings cannot be changed.

### "ERR" appears on the display while I am using a sensor.

Subjecting the watch to strong impact can cause sensor malfunction or improper contact of internal circuitry. When this happens, **ERR** (error) will appear on the display and sensor operations will be disabled.

#### Digital Compass Measurement



#### Barometric Pressure/Temperature Measurement



#### Altitude Measurement



- If **ERR** appears while a measurement operation is being performed in a sensor mode, restart the measurement. If **ERR** appears on the display again, it can mean there is something wrong with the sensor.
- Even if battery power is at Level 1 (**H**) or Level 2 (**M**), the Digital Compass Mode, Barometer/Thermometer Mode, or Altimeter Mode sensor may be disabled if there is not enough voltage available to power it sufficiently. In this case, **ERR** will appear on the display. This does not indicate malfunction, and sensor operation should resume once battery voltage returns to its normal level.
- If **ERR** keeps appearing during measurement, it could mean there is a problem with the applicable sensor.

E-94

E-95

■ **ERR appears on the display after I perform bidirectional calibration or northerly calibration.**  
 If -- appears and then changes to **ERR** (error) on the calibration screen, it means that there is something wrong with the sensor.  
 • If **ERR** disappears after about one second, try performing the calibration again.  
 • If **ERR** keeps appearing, contact your original dealer or nearest authorized CASIO distributor to have the watch checked.

■ **ERR appears on the display after I perform northerly calibration.**  
 The **ERR** message indicates there may be some problem with the sensor. The **ERR** message also may be due to movement of the watch while the calibration procedure is being performed. Try performing calibration again, taking care to ensure that the watch is not moved.  
 If this does not solve the problem, the problem may be due to some nearby source of terrestrial magnetism. Try performing the calibration procedure again from the beginning.

Whenever you have a sensor malfunction, take the watch to your original dealer or nearest authorized CASIO distributor as soon as possible.

■ **What causes incorrect direction readings?**  
 • Incorrect bidirectional calibration. Perform bidirectional calibration (page E-28).  
 • Nearby source of strong magnetism, such as a household appliance, a large steel bridge, a steel beam, overhead wires, etc., or an attempt to perform direction measurement on a train, boat, etc. Move away from large metal objects and try again. Note that digital compass operation cannot be performed inside a train, boat, etc.

■ **What causes different direction readings to produce different results at the same location?**  
 Magnetism generated by nearby high-tension wires is interfering with detection of terrestrial magnetism. Move away from the high-tension wires and try again.

E-96

■ **Why am I having problems taking direction readings indoors?**  
 A TV, personal computer, speakers, or some other object is interfering with terrestrial magnetism readings. Move away from the object causing the interference or take the direction reading outdoors. Indoor direction readings are particularly difficult inside ferro-concrete structures. Remember that you will not be able to take direction readings inside of trains, airplanes, etc.

■ **The barometric pressure differential pointer does not appear on the display when I enter the Barometer/Thermometer Mode.**  
 • This could indicate sensor error. Try pressing (Ⓜ) again.  
 • The barometric pressure differential pointer is not displayed when the displayed current barometric value is outside of the allowable measurement range (260 to 1,100 hPa).

**World Time Mode**  
 ■ **The time for my World Time City is off in the World Time Mode.**  
 This could be due to incorrect switching between standard time and daylight saving time. See "To specify standard time or daylight saving time (DST) for a city" (page E-87) for more information.

**Charging**  
 ■ **The watch does not resume operation after I expose it to light.**  
 This can happen after the power level drops to Level 5 (page E-11). Continue exposing the watch to light until the battery power indicator shows "H" or "M".

E-97

## Specifications

**Accuracy at normal temperature:** ±15 seconds a month  
**Timekeeping:** Hour, minutes, seconds, p.m. (P), year, month, day, day of the week  
 Time format: 12-hour and 24-hour  
 Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099  
 Other: Two display formats (year screen, Tide Graph screen); Home City code (can be assigned one of 48 city codes); Standard Time / Daylight Saving Time (summer time)  
**Digital Compass:** 20 seconds continuous measurement; 16 directions; Angle value 0° to 359°; Four direction pointers; Calibration (bidirectional, northerly); Magnetic declination correction; Bearing Memory  
**Barometer:**  
 Measurement and display range:  
 260 to 1,100 hPa (or 7.65 to 32.45 inHg)  
 Display unit: 1 hPa (or 0.05 inHg)  
 Measurement timing: Daily from midnight, at two hour intervals (12 times per day); Every five seconds in the Barometer/Thermometer Mode  
 Other: Calibration; Manual measurement (button operation); Barometric pressure graph; Barometric pressure differential pointer; Barometric pressure change indicator  
**Thermometer:**  
 Measurement and display range: -10.0 to 60.0°C (or 14.0 to 140.0°F)  
 Display unit: 0.1°C (or 0.2°F)  
 Measurement timing: Every five seconds in the Barometer/Thermometer Mode  
 Other: Calibration; Manual measurement (button operation)

E-98

**Altimeter:**  
 Measurement range: -700 to 10,000 m (or -2,300 to 32,800 ft.) without reference altitude  
 Display range: -10,000 to 10,000 m (or -32,800 to 32,800 ft.)  
*Negative values can be caused by readings produced based on a reference altitude or due to atmospheric conditions.*  
 Display unit: 5 m (or 20 ft.)  
 Current Altitude Data: 5-second intervals for 1 hour (0'05), or 5-second interval for first 3 minutes followed by 2-minute interval for next 24 hours (2'00)  
 Altitude Memory Data:  
 Manually saved records: 14 (altitude, date, time)  
 Auto saved values: Two sets (memory areas) each of high altitude and its measurement date and time, low altitude and its measurement date and time, total ascent and its save start date and time, total descent and its save start date and time  
 Other: Reference altitude setting; Altitude differential; Altitude auto measurement method (0'05 or 2'00)  
**Bearing Sensor Precision:**  
 Direction: Within ±10°  
*Values are guaranteed for a temperature range of -10°C to 40°C (14°F to 104°F).*  
 North pointer: Within ±2 digital segments

E-99

### Pressure Sensor Precision:

	Conditions (Altitude)	Altimeter	Barometer
Fixed temperature	0 to 6000 m 0 to 19680 ft.	± (altitude differential × 2% + 15 m) m ± (altitude differential × 2% + 50 ft.) ft.	± (pressure differential × 2% + 2 hPa) hPa ± (pressure differential × 2% + 0.059 inHg) inHg
	6000 to 10000 m 19680 to 32800 ft.	± (altitude differential × 2% + 25 m) m ± (altitude differential × 2% + 90 ft.) ft.	
Effect of variable temperature	0 to 6000 m 0 to 19680 ft.	± 50 m every 10°C ± 170 ft. every 50°F	± 5 hPa every 10°C ± 0.148 inHg every 50°F
	6000 to 10000 m 19680 to 32800 ft.	± 70 m every 10°C ± 230 ft. every 50°F	


\* Values are guaranteed for a temperature range of -10°C to 40°C (14°F to 104°F).  
 \* Precision is lessened by strong impact to either the watch or the sensor, and by temperature extremes.

**Temperature Sensor Precision:**  
 ±2°C (±3.6°F) in range of -10°C to 60°C (14.0°F to 140.0°F)  
**Tide/Moon Data:** Moon phase indicator for specific date; Moon age; Tide level for specific date and time  
 Other: High tide time adjustment; Moon phase reversal  
**Alarms:** 5 Daily alarms; Hourly time signal  
**Stopwatch:**  
 Measuring unit: 1/100 second  
 Measuring capacity: 23:59' 59.99"  
 Measuring modes: Elapsed time, split time, two finishes

E-100

**Countdown Timer:**  
 Measuring unit: 1 second  
 Countdown range: 60 minutes  
 Setting ranges: Countdown start time (1 to 60 minutes, 1-minute increments); Reset time (1 to 5 minutes, 1-minute increments)  
 Other: Progress beeper  
**World Time:** 48 cities (31 time zones)  
 Other: Daylight Saving Time/Standard Time  
**Illumination:** EL Backlight (electro-luminescent panel); Selectable illumination duration (approximately 1.5 seconds or 3 seconds); Auto Light Switch (Full Auto EL Light operates only in the dark)  
**Other:** Battery power indicator; Power Saving; Low-temperature resistance (-10°C/14°F); Button operation tone on/off  
**Power Supply:** Solar cell and one rechargeable battery  
 Approximate battery operating time: 6 months (from full charge to Level 4) under the following conditions:  
 • Watch not exposed to light  
 • Internal timekeeping  
 • Display on 18 hours per day, sleep state 6 hours per day  
 • 1 illumination operation (1.5 seconds) per day  
 • 10 seconds of alarm operation per day  
 • 10 digital compass operations per week  
 • 1 hour of altimeter measurement at 5-second interval, once per month  
 • 2 hours of barometric pressure measurement per day  
*Frequent use of illumination runs down the battery. Particular care is required when using the auto light switch (page E-91).*

E-101

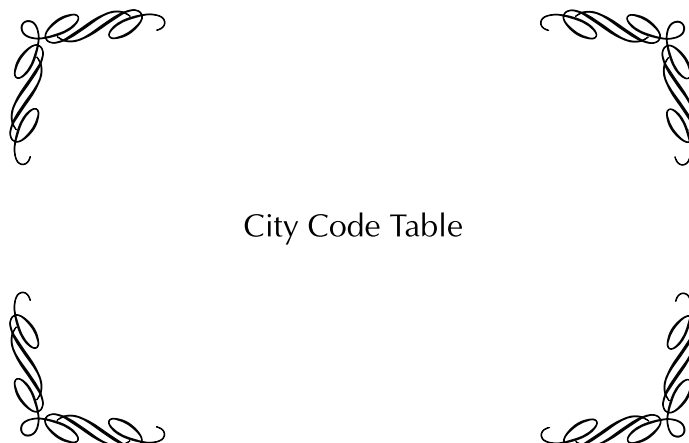

## City Code Table

## City Code Table

City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11
HNL	Honolulu	-10
ANC	Anchorage	-9
YVR	Vancouver	-8
LAX	Los Angeles	-8
YEA	Edmonton	-7
DEN	Denver	-7
MEX	Mexico City	-6
CHI	Chicago	-6
NYC	New York	-5
SCL	Santiago	-4
YHZ	Halifax	-4
YYT	St. Johns	-3.5
RIO	Rio De Janeiro	-3
FEN	Fernando de Noronha	-2
RAI	Praia	-1

City Code	City	UTC Offset/ GMT Differential
UTC		
LIS	Lisbon	0
LON	London	0
MAD	Madrid	0
PAR	Paris	0
ROM	Rome	+1
BER	Berlin	+1
STO	Stockholm	+1
ATH	Athens	+2
CAI	Cairo	+2
JRS	Jerusalem	+2
MOW	Moscow	+3
JED	Jeddah	+3
THR	Tehran	+3.5
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+5

City Code	City	UTC Offset/ GMT Differential
DEL	Delhi	+5.5
KTM	Kathmandu	+5.75
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	+7
HKG	Hong Kong	+8
BJS	Beijing	+8
TPE	Taipei	+8
SEL	Seoul	+9
TYO	Tokyo	+9
ADL	Adelaide	+9.5
GUM	Guam	+10
SYD	Sydney	+10
NOU	Noumea	+11
WLG	Wellington	+12

- Based on data as of July 2010.
- The rules governing global times (GMT differential and UTC offset) and summer time are determined by each individual country.